

SC28/40

stringing instructions

**TT SOVEREIGN, AIRSTICK 130/140
PRO SOVEREIGN 650
PRO AIRSTICK LITE 550
TEAM AIRSTICK 500**

Pattern: 16M x 17X

Stringing:

Start Mains at head. Loop 1LM under power ring, back to 2LH. Loop 1RM over power ring, back to 2RH.

Note: LM, 3LM, 5LM, and 7LM will pass under the power ring and return forming 2LM, 4LM, 6LM and 8LM respectively.

1RM, 3RM, 5RM and 7RM will pass over the power ring and return forming 2RM, 4RM, 6RM and 8RM respectively.

Mains must be tensioned and clamped at the head only. M's skip 7H, 9H and 10H. Shared holes at 5H, 6H and 11H. Start X's at 5H, hard weave technique required


Bottom X: 1T.

Tie Off:

- Mains at 8H
- Crosses at 4H and 2T.

Prince requires:

The cross strings to be installed from the top on all racquets. Installing crosses starting from the bottom will void the warranty.

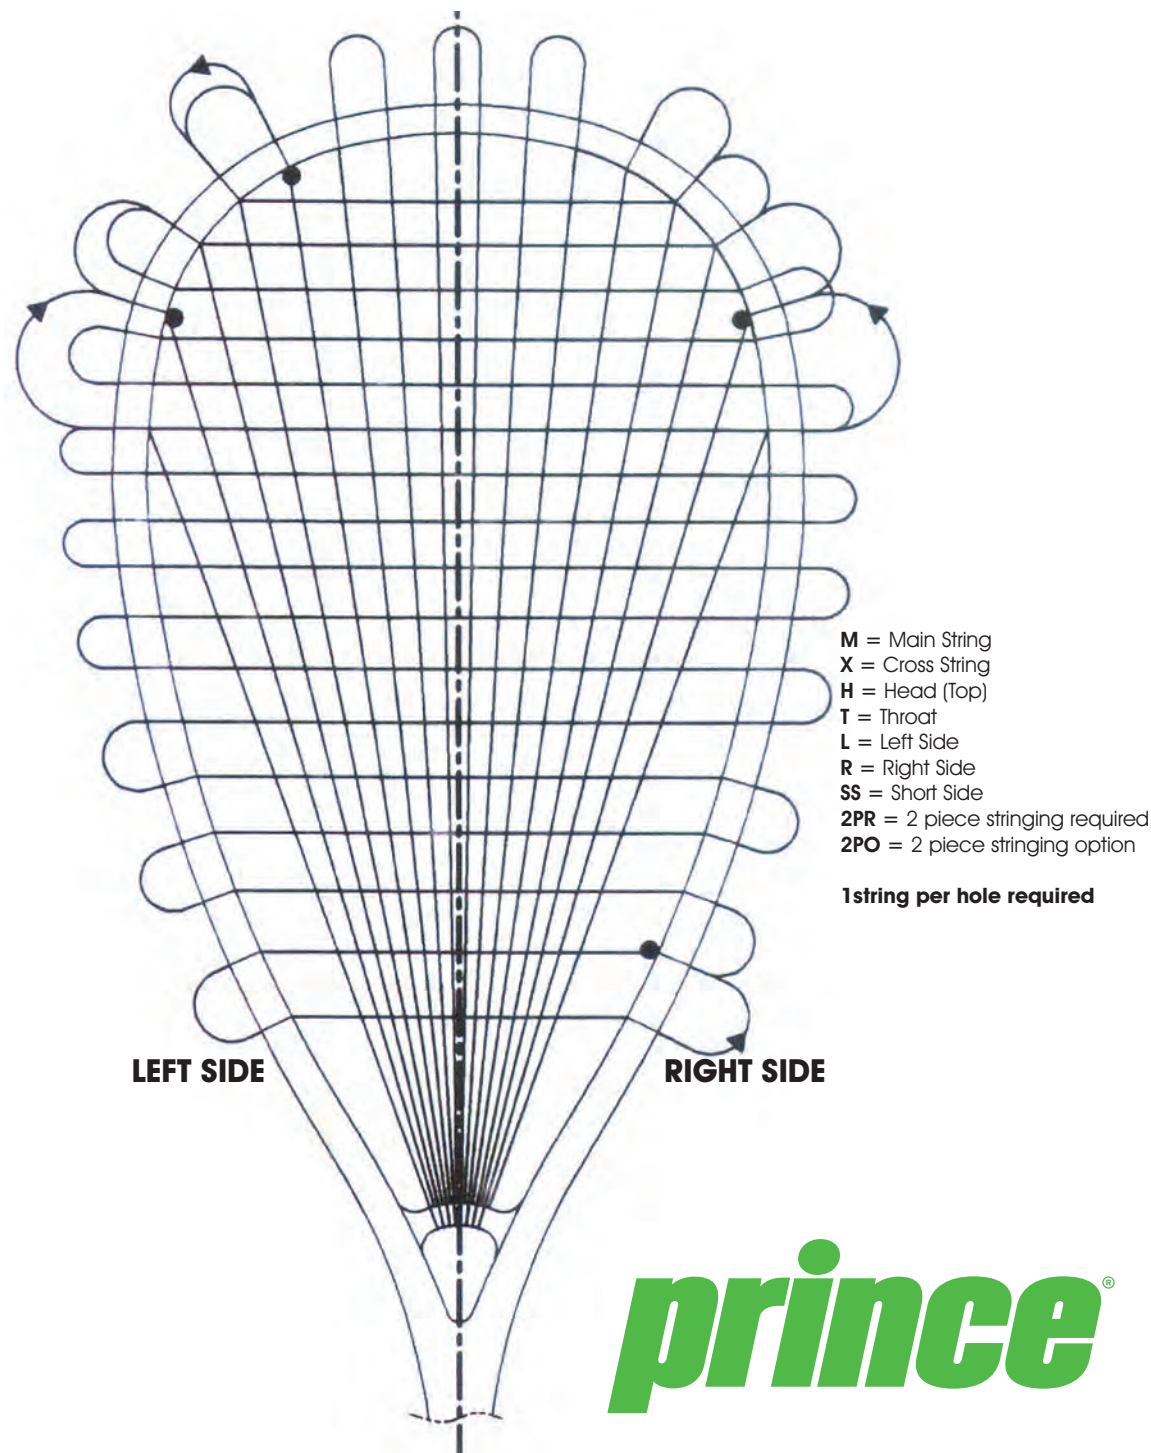

prince[®]