

ENGINEERING CODE:

SX44

stringing instructions

**0³ TOUR / 0³ BLACK
PRO TOUR ORIGINAL 750
TEAM BLACK ORIGINAL 800**

Pattern: 16M x 16X

Main String:

- Start Mains at head
- Skip 5H, 7H, 8H, 10H, 11H and 12H
- Share holes at 7H and 12H.

Cross String:


- Start Crosses at 5H
- Bottom Crosses at 1T.

Tie Off:

- Mains at 9H
- Crosses at 6H (left), 2T (right).

Prince requires:

The cross strings to be installed from the top on all racquets. Installing crosses starting from the bottom will void the warranty.

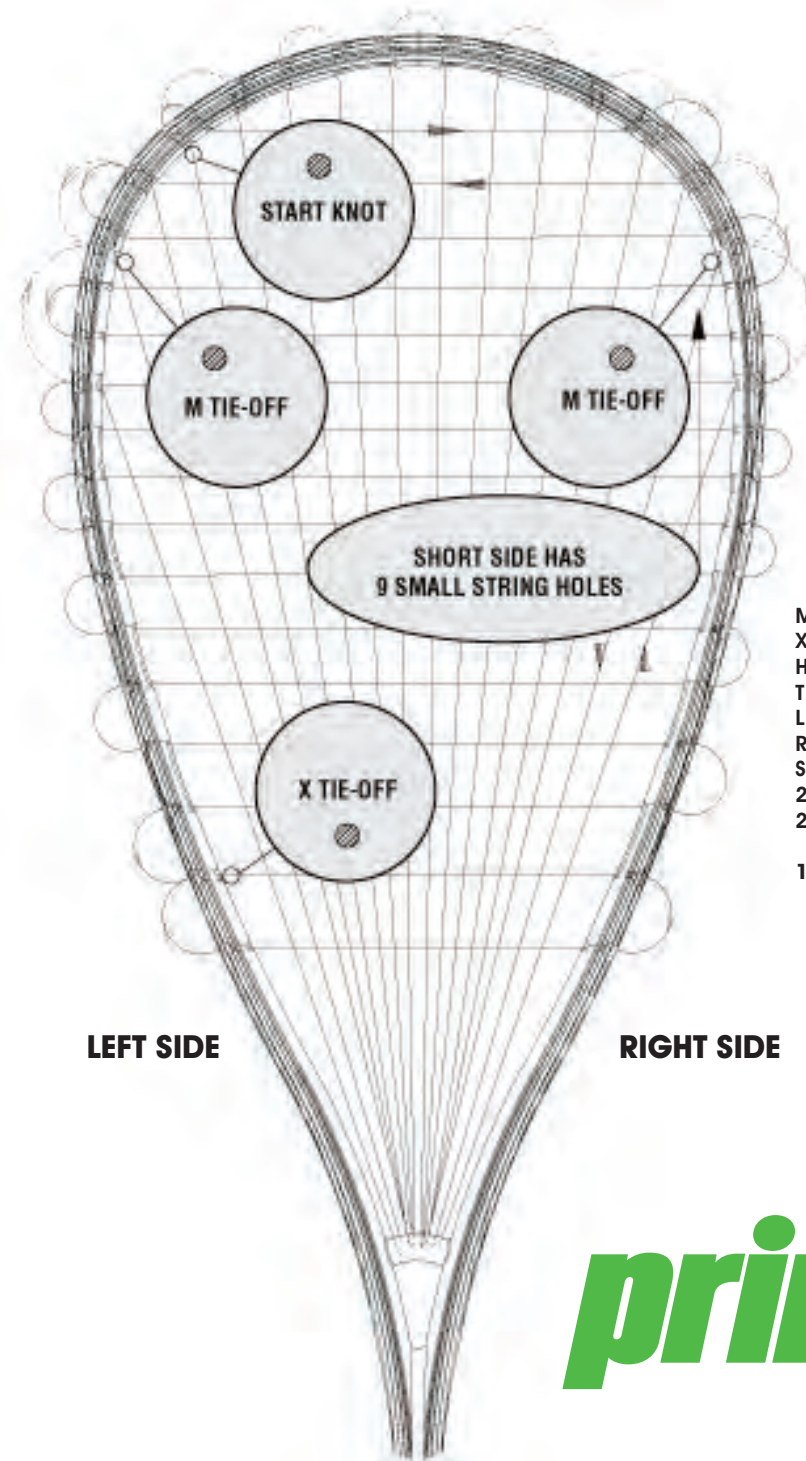

INSTRUCTIONS:

1. Please note that when tensioning the upper cross strings in the first 4 upper 'O Ports', there is a tendency for the racquet to rotate causing the string being tensioned to move toward the previously tensioned cross string. This can be prevented by using the Boomerang tool. Another option is to use the brake on the machine to prevent the racquet from rotating.
2. Correct position for the Boomerang tool.
3. Pass the string through the inside of the O Port.
4. Position the string into the 'Boomerang tool' groove.
5. Pull the string.
6. Release the tension and remove the Boomerang.

